

TOSHIBA

Transistor Inverter



High-performance Inverter TOSVERT™

VF-AS1

Flexible for you

I need the most suitable inverter for my application, which has low noise, low harmonics, minimal parameter setting, high torque and control. **We meet all your requirements with VF-AS1.** It has outstanding Performance, including high torque, fast response, high accuracy and excellent environmental compatibility with easy operation.

The VF-AS1 is an advanced inverter evolved to satisfy all your needs in one comprehensive product.



High-performance Inverter TOSVERT™

VF-AS1




Compatible with the World's Main Standards (CE marking, UL, CSA, C-UL)

* UL and CSA compliance conditions partially differ from the standard specifications. Consult us separately for details.



ISO 9001 Certification Acquired
This product is designed and manufactured in accordance with ISO 9001. We have acquired certification of "ISO 9001", the international quality assurance standard.



ISO 14001 Certification Acquired
The factories manufacturing this product have acquired certification of environmental management system, registered factories.

For your Commercial facilities, offices and factories

- Feature: Reduce high-frequency noise*1, Reduce harmonics*1
- Applications: Washing machines, Treadmill, Showcase refrigerators, Medical equipment, stage equipment

For machinery that requires simple function

- Feature: EASY key, 8 basic parameters
- Applications: Drilling machines, Handling machines, Conveyors, Semiconductor production Equipment, Cutting machines, Woodworking machinery

For machinery that requires high torque and a large capacity

- Feature: Starting torque of 0.3Hz-200%*2, Up to 500kw for a 400V class
- Applications: Cranes, Mining machinery, refrigerator, Presses, Compressors, Crushing machine

For system devices that requires flexibility

- Feature: My function, High-precision and high-speed torque control with or without sensors
- Applications: Process lines, Printing machines, Coilers/uncoilers

*1 Depends on the voltage and capacity range

*2 When a TOSHIBA standard 3-phase, 0.4 to 3.7kw 4-pole motor are driven

Voltage Class (rated output)	Applicable Motor Output (kW)																											
	0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	200	220	280	355	400	500		
3ø200V/9ø200V	[Red bar]																											
3ø400V/3ø400V	[Red bar]																											

Coming soon

Up to 5.5kw, 3-phase 200V class can be applied to 1-phase input power supply by using 1 size-up rating

Contents

For your commercial facilities, offices and factories P3	Standard specifications P10
For machinery that requires simple function P4	External dimensions P13
For machinery that requires high torque and a large capacity P5	Standard connection diagrams P17
For system devices that requires flexibility P6	Terminal functions P18
For machinery that requires expansion P7	For inverter users P19
Function Description P9	Peripheral devices P22

For your commercial facilities, offices and factories



This makes the inverter ideal for your electronic applications such as washing machines treadmill, showcase refrigerators for stores, medical equipment, and stage equipment where attention must be paid to peripheral devices.

*1: Photos of machinery are for illustrative purposes only.

Point
1


Harmonics Reduction, Power Factor Improvement

- A compact, space-saving new type of DC reactor is built into 200 V class 11 to 45 kW and 400 V 18.5 to 75 kW models.

In addition to reducing harmonics, this reactor limits the input current to 110% of the rated output current, and it has been designed to be compatible with power supply systems containing transformers, molded-case circuit breakers, and power lines.

Adding on the optional DC reactor enables compliance with IEC harmonics standards.

Effect of built-in reactor

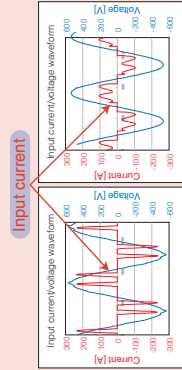

Conventional models (400V, 30kW)
Input current value 57.6 A
Overall input power factor 59%

VF-AS1 (400V, 30kW)
Input current value 58.8 A
Overall input power factor 88%

Point
2

High-frequency Noise Reduction


- High-frequency noise is drastically reduced on models with built-in noise filters. Built-in noise filters are ideal for sites from commercial facilities and offices through to factories where attention must be paid to peripheral devices. Compared with filter not integrated models, space and wiring savings have been achieved by incorporating the filter in the panel. Also, models with built-in EMC noise filter comply with the European EMC Directive as individual inverter units.

European EMC Directive : IEC/EN61800-3, 1st Environment, C2 (200V-0.4 to 1.5kW)

or
IEC/EN61800-3, 2nd Environment, C3

200V class models, 0.4 to 7.5kW : EMI noise filter (complies with the European EMC Directive) built-in standard
200V class models, 11 to 45kW : Basic noise filter (not complies with the European EMC Directive) built-in standard
400V class models, 0.75 to 75kW : EMI noise filter (complies with the European EMC Directive) built-in standard
400V class models, 90 to 500kW : EMI noise filter (complies with the European EMC Directive) built-in standard

Effect of built-in filter

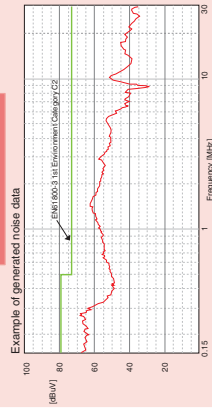


Built-in EMC filter



For machinery that requires simple function

This makes the inverter ideal for drilling machines, handling machines, conveyors, semiconductor production equipment, cutting machines, and woodworking machinery that require simple function.

*1: Photos of machinery are for illustrative purposes only.

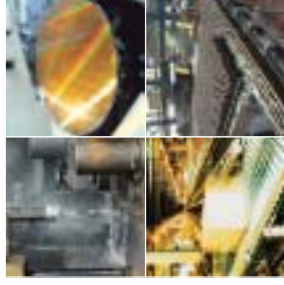

Point
3

Simple Setup by EASY Key

EASY key



Quick mode (EASY)

Titles	Function
R/U/V	Parameter setting macro function
F/C	V/F control mode selection
F/A	Maximum frequency
A/L	Acceleration time 1
d/L	Deceleration time 1
E/H,r	Motor overload protection level 1
F/I	FM terminal meter adjustment
P.5.EL	Parameter display selection

- In the Quick mode, pressing the EASY key on the panel allows you to operate the inverter by eight basic parameters. When setting each of the functions, press the EASY key to move to the standard mode by one-touch operation. In this mode, you can access all parameters.
- You can customize the Quick mode display, maximum of 32 target parameters are displayed to suit your specific setup requirements.
- You can also use the EASY key as a panel/remote key to switch between panel and remote operation, and as a shortcut key to directly access any specific setup or display screen.

Point
4

Easy Installation, Easy commissioning, and Easy maintenance

Side-by-side installation

- Side-by-side installation of inverters is possible up to the inverter's total capacity. This allows effective utilization of space inside control panels. Heat sink can be installed outside of the panel as an option.

Removable control terminal board

- A removable terminal board is used. This allows you to use the control wiring when replacing the inverter, which also makes maintenance easier.

ON/OFF control of cooling fan

- Temperature-based ON/OFF control reduces noise while the inverter is being stopped, saves energy and extends the cooling fan's life.

Monitoring of serviceable parts/alarm output

- The expected replacement cycle of main circuit capacitors, capacitors on control board, and cooling fan is monitored, and an alarm is output when the cycle is reached.

Side-by-side installation



Removable control terminal board



For machinery that requires high torque and a large capacity




This makes it ideal for cranes, mining machinery, refrigerator, presses, compressors, crushing machine and other machinery that require a high torque and large capacity.

*1: Photos of machinery are for illustrative purposes only.


Point
5

Excellent Motor Control Performance

Example of torque characteristics

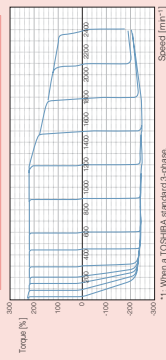


Speed response to reference changes

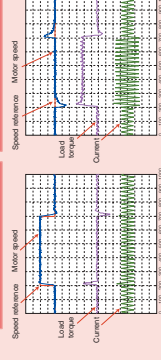

Fast response

Speed response to reference changes

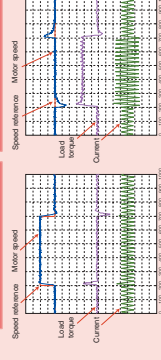

Fast recovery against impact load

- Motor constants required for vector control can be easily set by auto-tuning to enable 1:120 speed control. Moreover, the VF-AS1 also features a robust structure that is unlikely to be influenced by motor temperature.

- On inverters provided with a sensor, high-torque operation of 200%*2 from zero velocity is possible, achieving a speed control range of 1:1000.

- High-speed response frequencies of 40 Hz without sensor and 50 Hz with sensor are achieved respectively, to maintain fixed speed in response to sudden changes in load.

- Modifying software enables high-frequency output up to 1000 Hz, which is ideal for spindle rotation of woodworking and metalworking machinery.

*2: When a TOSHIBA standard 3-phase, 0.4 to 3.7 kW 4-pole motor are driven.

Point
6

Dedicated Functions Ideal for Lifting Applications

Setup by teaching



Brake sequence/light-load, high-speed functions

- The inverter has two built-in functions, the brake sequence function and light-load, high-speed function, as standard. The brake sequence function measures the timing with braking by an external motor to achieve smooth operation at start and stop of braking operation. The light-load, high-speed function automatically increases the speed when operating light loads according to the lifting load to improve conveyance efficiency. A learning function for setting and storing to memory required parameters while performing actual operations is also provided to facilitate adjustments.

Built-in transistor for dynamic braking

- The VF-AS1 has a built-in transistor for dynamic braking up to 160 kW, which makes it ideal for lifting applications.

For system devices that requires flexibility



This makes the inverter ideal for process lines, printing machines, coils/uncloggers.

*1: Photos of machinery are for illustrative purposes only.

Point
7

Customizing by “My Function”

My function	
Number of program steps	: 28
Internal relays	: 8
Internal counters	: 2
Logic commands	: ST, STN, AND, ANDN, OR, ORN, SET, RSET, HOLD
Data commands	: ON/OFF DELAY TIMER : EQ, NE, GT, GE, LT, LE, ASUB

- With “My function”, you can create programs containing up to 28 steps. This achieves logic operations and internal data operations. Parameters can also be set according to analog input and minimum-peak hold of analog outputs. For example:

(Ex.1) Inverter is automatically switched to commercial operation without the external sequence when the inverter is tripped.


(Ex.2) A signal is output when torque reaches 120% and frequency is 5 Hz.

(Ex.3) “Forward rotation operation”, “preset-speed operation frequency 3” and “No.2 acceleration/deceleration” are simultaneously turned ON by input on a single terminal.

(Ex.4) The acceleration/deceleration time is changed dynamically by a voltage within the range 0 to 10 V.

Point
8

Communications and Network

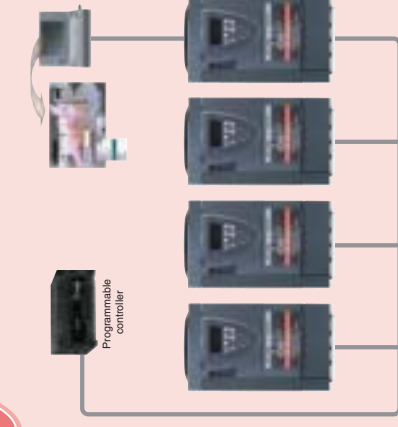

RS-485 communications

- RS-485 communications is equipped as standard, and Modbus-RTU protocol is supported in addition to TOSHIBA protocol.

Network options

- Use of communication options enables support of DeviceNet*2, PROFIBUS and CC-Link and other main fieldbuses.

Data tracing

- The PCM001Z communications software allows you to edit, monitor, and trace parameter data on a PC, enabling easier data management from inverter startup through to maintenance.

*2: DeviceNet is a registered trademark of ODVA (Open DeviceNet Vendor Association).

For machinery that requires expansion

Point
9

Outstanding Lineup of Options

LCD Extension Panel Option



This panel is an 23-character x 8-line display, and can be used for simple setup and monitoring by selection of parameters using the jog dial. The display language can be switched between English and Japanese. (German, Italian, Spanish, and Chinese will be available soon.)
Type: RKP004Z




*The photograph shows a screen currently in development.

LED Extension Panel Option



Our customers require a "display that is easily visible from a long way away." In response to this need, we developed this panel using 20 mm LEDs, the largest in its class in the market, to ensure outstanding visibility. It has also been designed to be fitted into panels for use as an extension panel or display. In addition, it can be used as a parameter copy and is capable of storing parameters for up to three models.
Type: RKP002Z



Expanded Terminal Block Option Fieldbus Option



This I/O terminal block can be added on to enhance your system for extra compatibility with a wide range of systems:

- Contact inputs (4)
- Contact outputs (2)
- Analog inputs (2)
- Analog outputs (2)
- PTC input (1)
- Relay output (1 circuit)
- Pulse train input (1)

Type: ETB003Z, ETB004Z

Main fieldbuses are supported to enable connection to a host controller to achieve savings in space and centralized control of systems.

• DeviceNet¹
Type: DEV002Z

• PROFIBUS
Type: PDP002Z

• CC-Link
Type: CCL001Z

¹ DeviceNet is a registered trademark of ODVA (Open DeviceNet Vendor Association).

Encoder Feedback Option



Three encoder feedback options are provided to match output for support of vector control with a sensor.

• Line driver output (RS-422)
Type: VEC007Z

• Open collector/complimentary output (12 V)
Type: VEC004Z

• Open collector/complimentary output (15 V)
Type: VEC005Z

Point
10

Wide Range of Applications

Safety Environmental Compatibility

Ambient temperature 60°C

The VF-AS1 can be used at a rating up to an ambient temperature of 50°C and in environments up to 60°C at a derating current.

Eco Design

88% of materials used on the VF-AS1 are recyclable, which design more than meets of the European WEEE (Waste Electrical and Electronic Equipment) Directive of 70%.

Various Drive Performance

Permanent Magnet Motor (PM) Drive

The PM is driven efficiently by a TOSHIBA oriented control algorithm to achieve savings in energy and space.

High-frequency Output 1000 Hz

Software modification increases output up to a high frequency of 1000 Hz, making it ideal for woodworking and metalworking machinery.

New DC Braking

A newly developed DC braking function allows the stop time to a quarter of that on conventional models.

A Further Enhanced of Functions

Multi-PID Control

As well as process-type PID control (e.g. temperature, pressure, flow rate), the VF-AS1 incorporates speed-type PID control that is compatible with speed feedback, for example, in follow-up operation or winding, for line compatibility with line control.

• Traverse • Power interruption synchronized control

Two extra controls are achieved, traverse control during rewinding that is mandatory on fabric machinery, and power interruption synchronized control for preventing thread breakage when a power interruption occurs.

• Drooping • Speed gain switching • Zero speed lock • Dwell

Drooping distributes the load of 2-shaft drive on conveyance machinery, for example. Speed gain switching enables adaptation to changes in inertia during operation. Zero speed is hold when the inverter is stopped. And dwell controls acceleration/deceleration, for example, when conveying heavy loads.

Basic functions

Each "setup item" that determines the control characteristics of the inverter is called a "parameter." For example, to change the acceleration time, you choose the acceleration time parameter (titled "F.L.C").

Quick mode (EASY)


To enter the Quick mode, press the EASY key on the panel. In this mode, you can set eight of the basic parameters.

Standard mode

In this mode, you can set all parameters. For details of parameters, refer to the Instruction Manual.

Basic parameters

Title	Function	Default
R/U 4	Parameter setting macro function	-
P/E	V/F control mode selection	0
F/H	Maximum frequency	0
F.L.C	Acceleration time 1	0
F.L.C	Acceleration time 2	0
F.H	Motor overload protection level 1	0
F.H	FM terminal meter adjustment	0
P.S.E.L	Parameter display selection	0

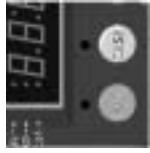

Title	Function	Adjustment Range	Default
F.C	Frequency of operation panel	L.L - U.L Hz	0
R/U H	History function		
R/U 1	Automatic acceleration/deceleration	0:Default 1:Automatic setting 2:Automatic setting (during acceleration only)	-
R/U 2	Automatic torque boost	0:Disabled 1:Automatic torque boost + auto-tuning 1 2: Sensorless vector control 1 + auto-tuning 1	0
R/U 4	Automatic function setting	0:Voltage/current switching from external terminal 4:Frequency setting by means of current 5:Frequency setting and operation on operation panel	0
C.R.D	Command mode selection	0:Terminal input enable 1:Operation panel input enable (including LED/LCD option input) 2:Forward panel RS485 3:Remote operation input 3:Terminal RS485 4:Serial communication input 4:Communication option input	0
F.R.D	Frequency setting mode selection 1	1:V/F (vector control) 2:FRS (1-wire) 3:FRS (2-wire) 4:Operation panel input (including LED/LCD option input) 5:Operation panel RS485 (2-wire) communication input 6:Internal RS485 (4-wire) communication input 7:Communication option input 8:Optional AT (differential current input) 9:Optional AI2 (voltage/current input) 10:UP/DOWN frequency 11:RP pulse input 12:High-speed pulse input 13:Binary/BCD input	2
P/E	V/F control mode selection	0:Constant torque characteristic 1:Voltage decrease curve 2:Automatic torque boost 3:Sensorless vector control 1 (speed) 4:Sensorless vector control 2 (speed/torque) 5:V/F 5-point setting 6:PM control 7:PG feedback vector control 1 (speed) 8:Sensorless vector control 2 (speed/torque)	0
v.b	Manual torque boost 1	0.0~30.0%	
v.L	Base frequency 1	25.0~500.0Hz	Depends on the capacity
v.L u	Base frequency voltage 1	200V class:330~330V 400V class:50~500V	WN650, WP50.0
F.H	Maximum frequency	30.0~500.0Hz	Depends on the capacity
U.L	Upper limit frequency	0.0~F Hz	WN650.0, UG 800
L.L	Lower limit frequency	0.0~0.1 Hz	Depends on the capacity
R.L.C	Acceleration time	0.1~4000.0 sec	Depends on the capacity
d.F.C	Deceleration time 1	0.1~4000.0 sec	Depends on the capacity
R.U 2	RFRS input point 2 frequency	0.0~F Hz	Depends on the capacity
R.L.F 2	V/F input point 2 frequency	0.0~F Hz	WN650.0, WP50.0
S.r 1	Present speed operation frequency 1	L.L - U.L Hz	WN650.0, UG 800
S.r 2	Present speed operation frequency 2	L.L - U.L Hz	0.0
S.r 3	Present speed operation frequency 3	L.L - U.L Hz	0.0
S.r 4	Present speed operation frequency 4	L.L - U.L Hz	0.0
S.r 5	Present speed operation frequency 5	L.L - U.L Hz	0.0
S.r 6	Present speed operation frequency 6	L.L - U.L Hz	0.0
S.r 7	Present speed operation frequency 7	L.L - U.L Hz	0.0
F.r	Forward run timer unit selection	0:Forward run 1:Forward run 2:Forward run (Forward/reverse switchable on operation panel)	0
L.r	Motor overload protection level 1	10~100%	100
U.L 1	Motor overload protection characteristic selection	0:UL stall 1:UL stall (no stall) 2:UL stall (stall) 3:UL stall (no stall) 4:UL stall (stall) 5:UL stall (no stall) 6:UL stall (stall) 7:UL stall (no stall) 8:UL stall (stall)	0
d.S.P 2	Current/voltage unit selection	0%: % 1:A (ampere)/V (volt)	
F.N.S.L	FM terminal meter selection	0~4: (0:Output frequency, 1:Frequency command value, 2:Output current, 3:Input voltage, 4:Output voltage, etc.)	0
F.N	FM terminal meter adjustment	0~4: (0:Output frequency, 1:Frequency command value, 2:Output current, 3:Input voltage, 4:Output voltage, etc.)	0
R.F.L	FM terminal meter selection	0~4: (0:Output frequency, 1:Frequency command value, 2:Output current, 3:Input voltage, 4:Output voltage, etc.)	2
R.F.L	FM terminal meter adjustment	0~4: (0:Output frequency, 1:Frequency command value, 2:Output current, 3:Input voltage, 4:Output voltage, etc.)	2
C.F	AIW carrier frequency	1.0~16.0kHz (large capacity model) 0.8~8kHz	Depends on the capacity
U.C.P	AIW carrier frequency selection	0:Default 1:AIW carrier frequency 2:AIW carrier frequency (3.1~2.4 Step/Step)	0
U.C.P	Regenerative power ride-through control	0:Disabled 1:Power ride-through 2:Disable during power failure	0
P.b	Dynamic braking selection	3:Synchroized deceleration/acceleration (synchroized acceleration/deceleration signal)	
P.b.c	Dynamic braking resistance	0:Disabled 1:Select (braking resistance overload detect) 2:Select (braking resistance overload not detect)	
P.b.c.P	Allowable continuous braking resistance	0.5~1000%	
E.S.P	Factory default setting	0.01~600.0kW	
P.S.E.L	Parameter display selection	0:1~150 Hz default setting 2:50 Hz default setting 3:Factory default setting 4:Trip cleared 5:Cumulative operation time cleared	
F.r ~ F.9	Extended parameters	6>Type information initial 7>User-defined parameter recorded 8:Item 7 above reset 9:Cumulative fan operation time cleared 10:Acceleration/deceleration time setting 0.01 sec~600.0 sec 11:Acceleration/deceleration time setting 0.1 sec~600.0 sec	
U.r 0	Automatic coil function	0:Standard setting mode at time of activation of motor 1:Quick mode at time of activation of motor 2:Quick mode only	0
U.r 1	Automatic coil function	See parameters in more detail.	-

Extended parameters

About 500 extended parameters are available. For details on extended parameters, please visit our web site (<http://www.inverter.co.jp/>).

Standard specifications

Standard specifications (200 V class - 0.4 to 45 kW, 400 V class -0.75 to 75 kW model)

200 V class

Item	Specification															
	0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45		
Applicable Motor (kW)	VFAS1-															
Type	VFAS1-															
Form	2004PL	2007PL	2015PL	2022PL	2037PL	2055PL	2075SPL	2110PM	2150PM	2185PM	2220PM	2300PM	2370PM	2450PM		
Output Capacity (kVA) (Note 1)	1.1	1.8	3.0	4.2	6.7	10	13	21	25	29	34	46	55	67		
Output Current (A) (Note 2)	3.0	4.8	8.0	11	17.5	27.5	33	54	66	75	88	120	144	176		
Rating	(3.0)	(4.5)	(8.0)	(10.5)	(16.6)	(25.0)	(33)	(49)	(64)							
Output Voltage	3-phase, 200 to 240 V (The maximum output voltage is the same as the input voltage.)															
Overload Current Rating	150%~1 minute, 165%~2 seconds															
Dynamic Braking Circuit	Built-in															
Dynamic Braking Resistor	Compatible with external options															
Voltage/Frequency	3-phase, 200 to 240 V - 50/60 Hz															
Allowable Fluctuation	Voltage +10% - 15% (Note 3) Frequency ±5%															
Protective method	IP20 enclosed type (JEM1030)															
Cooling method	Forced air cooling															
Color	RAL7016															
Built-in Filter	EMI noise filter (Note 5)															
DC Reactor	External option															
	Basic noise filter (Note 6)															
	Built-in															

400 V class

Item	Specification															
	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	
Applicable Motor (kW)	VFAS1-															
Type	VFAS1-															
Form	4007PL	4015PL	4022PL	4037PL	4055PL	4075PL	4110PL	4150PL	4185PL	4220PL	4300PL	4370PL	4450PL	4530PL		
Output Capacity (kVA) (Note 1)	1.8	3.1	4.4	8.0	11	13	21	25	31	37	50	60	72	88	122	
Output Current (A) (Note 2)	2.3	4.1	5.8	10.5	14.3	17.6	27.7	33	41	48	66	79	94	116	160	
Rating	(2.3)	(4.0)	(5.3)	(8.6)	(13)	(17)	(25)	(32)								
Output Voltage	3-phase, 380 to 480 V (The maximum output voltage is the same as the input voltage.)															
Overload Current Rating	150%~1 minute, 165%~2 seconds															
Dynamic Braking Circuit	Built-in															
Dynamic Braking Resistor	Compatible with external options															
Voltage/Frequency	3-phase, 380 to 480 V - 50/60 Hz															
Allowable Fluctuation	Voltage +10% - 15% (Note 3) Frequency ±5%															
Protective method	IP20 enclosed type (JEM1030)															
Cooling method	Forced air cooling															
Color	RAL7016															
Built-in Filter	EMI noise filter (Note 5)															
DC Reactor	External option															
	Built-in															

Note 1) Capacity is calculated at 220V for the 200V models and at 440V for the 400V models.

Note 2) Rated output current when the PWM carrier frequency (parameter C.F.) is 4kHz or less.

Note 3) ±10% when the inverter is used continuously (load of 100%).

Note 4) Inverters, 16.5kW or greater, do not have wiring port covers. They have large openings, but there is no space to bend the external cables inside the unit. If they are fitted external to the cabinet, please use an optional wiring port cover.

Note 5) Complies with the European EMC Directive, category C2 or IEC/EN61800-3, 2nd environment, category C3.

Note 6) Not complies with the European EMC Directive.

Note 7) Core and capacitors with external filter (optional). Complies with the European EMC Directive.

Standard specifications (200 V class -55 to 75 kW, 400 V class -90 to 500 kW model)

200 V class

Item	Specification
Applicable Motor (kW)	55
Type	VFAS1-
Form	2750P
Output Capacity (kVA) (Note 1)	84
Output Current (A) (Note 2)	221
Output Voltage	3-phase, 200 to 240 V (The maximum output voltage is the same as the input voltage.)
Overload Current Rating	150%—1 minute, 165%—2 seconds
Dynamic Braking	Built-in
Braking Circuit	Compatible with external options
Dynamic Braking Resistor	
Voltage/frequency	3-phase, 200 to 240 V – 50/60 Hz
Allowable Fluctuation	3-phase, 200 to 220 V – 50 Hz 3-phase, 200 to 240 V – 60 Hz
Protective method	Voltage +10% – 15% (Note 3) Frequency ±5%
Cooling method	IP20 enclosed type (JEM1030) (Note 4)
Color	Forced air cooling RAL7016
Filter	Built-in filter (optional)
DC Reactor	Attached DC reactor (Note 5)

400 V class

Item	Specification
Applicable Motor (kW)	90 110 132 160 200 220 280 355 400 500
Type	VFAS1-
Form	4900PC 4110KPC 4132KPC 4160KPC 4200KPC 4220KPC 4280KPC 4355KPC 4400KPC 4500KPC
Output Capacity (kVA) (Note 1)	136 164 197 239 295 325 419 511 578 717
Output Current (A) (Note 2)	179 215 259 314 387 427 550 671 759 941
Output Voltage	3-phase, 380 to 480 V (The maximum output voltage is the same as the input voltage.)
Overload Current Rating	150%—1 minute, 165%—2 seconds
Dynamic Braking	Built-in
Braking Circuit	Compatible with external options
Dynamic Braking Resistor	
Voltage/frequency	Compatible with external options 3-phase, 380 to 440 V – 50 Hz 3-phase, 380 to 480 V – 60 Hz
Allowable Fluctuation	Voltage +10% – 15% (Note 3) Frequency ±5%
Protective method	IP20 enclosed type (JEM1030) (Note 4)
Cooling method	Forced air cooling
Color	Built-in filter (Note 7) RAL7016
Filter	EMI noise filter (Note 5)
DC Reactor	Attached DC reactor (Note 5)

Note 1) Capacity is calculated at 220V for the 200V models and at 440V for the 400V models.

Note 2) Indicates the value when the PWM carrier frequency (parameter ϵF) is 2.5 kHz or less.

Note 3) ±10% when the inverter is used continuously (load of 100%).

Note 4) Inverters, 18.5kW or greater, do not have wiring port covers. They have large openings, but there is no space to bend the external cables inside the unit. If they are fitted external to the cabinet, please use an optional wiring port cover.

Note 5) For 200V/55kW, 400V/90kW or larger model, be sure to install DC reactor.

Note 6) However, this is unnecessary for DC input specifications.

Note 7) Complies with the European EMC Directive

IEC/EN61600-3, 2nd environment, category C3

Common Specifications

Item	Specification
Control system	Standard PWM control
Output voltage adjustment	Main circuit voltage feedback control. (Switchable between automatic adjustment/feedback control)
Output frequency range	Setting between 0.01 to 500Hz. Default max. frequency is set to 0.01 to 60Hz.
Minimum setting steps of frequency	Maximum frequency adjustment (30 to 500Hz) 0.01Hz operation per step (60Hz base). 0.02Hz analog input (60Hz base, 11 bit to 10kV)
Frequency accuracy	Within ±0.2% (25°C/10°C); analog input: ±0.01% (25°C/10°C); digital input: ±0.01% (25°C/10°C)
Voltage/frequency characteristics	With 50Hz, 0.95V/100V; with 60Hz, 1.0V/100V. (When the motor is operated at a frequency other than the rated frequency, the torque boost adjustment (0 to 30%), start frequency adjustment (0 to 10Hz), stop frequency adjustment (0 to 30Hz)
Frequency setting signal	3-bit potentiometer (possible to connect to 1 to 10k Ω -rated potentiometer) 0 to 110Vdc (Zn, 2k43) 4 to 20mAdc (Zn, 2k43)
Terminal board base frequency	The characteristic can be set arbitrarily by two-point setting. Compliant with 6 types of input: analog input (RR, VII, RX, R32), pulse input and binary input (R32, binary/BCD input, optional)
Frequency jump	3 places. Setting of jump frequency and width.
Upper and lower limit frequencies	Upper limit frequency: 0 to max. frequency, lower limit frequency: 0 to upper limit frequency
PWM carrier frequency	200V/45kW or less, adjustable between 1.0 to 16kHz for 400V/75kW or less/200V/55kW or less, adjustable between 1.0 to 8kHz for 400V/90kW or more
PID control	Adjustment of proportional gain, integral time, differential time and delay filter
Torque control	Voltage command input specification: DC 0 to 1.0V
Acceleration/deceleration time	0.01 to 6000 sec. Selectable from among acceleration/deceleration, times 1, 2, 3 and 4. Automatic acceleration/deceleration function, S pattern acceleration/deceleration 1 and 2 pattern adjustable.
DC braking	Adjustment of braking start frequency (0 to 120Hz), braking (0 to 100%) and braking time (0 to 10 sec.). With emergency stop braking function and motor shaft fr. control function.
Forward/reverse run (Note 1)	With F-CC closed to forward run, with R-CC closed to reverse run, with both closed to reverse run. With S-CC opened to coast stop. Emergency stop by panel operation or terminal board.
Jog run (Note 1)	Jog mode, if selected, allow jog operation from the operation panel.
Pre-set speed operation (Note 1)	Stop run by the operation panel. Selectable from 0 to 15 speeds.
Run stop	Stop run by the operation panel. Selectable from 0 to 15 speeds.
Soft start	Capable of restarting after a check of the main circuit elements in case the protective function is activated. Max. 10 times selectable arbitrarily. Waiting time adjustment (0 to 10 sec.)
Cooling fan ON/OFF	Automatic load reduction control at overloading. (Default, OFF)
Operation panel key operation ON/OFF	The cooling fan will be stopped automatically to assure long life when unnecessary.
Regenerative power ride-through control	Key prohibition: selectable between Stop key only, Mode key only, etc. All key operations can be prohibited.
Auto-restart operation	Possible to keep the motor running using its regenerative energy in case of a momentary power failure. (Default, OFF)
Simple pattern operation	Possible to restart the motor in coasting in accordance with its speed and direction. (Default, OFF)
Commercial inverter switching	Possible to select each pattern in 2 groups from 15-speed operation frequency. Max. 16 types of operation possible. Terminal board operation/restart operation possible.
Light-load high-speed operation	Possible to switch operation by commercial power source or inverter
Overrun function	Increase the operating efficiency of the machine by increasing the rotational speed of the motor when it is operated under light load.
Protective function	When two or more inverters are used to operate a single load, this function prevents load from concentrating on one inverter due to unbalance. External input signal adjustment is possible to the operation frequency command value.
Electrostatic Thermal Characteristics	Stall prevention, current limit, overcurrent, overvoltage, short circuit on the load side, ground fault on the load side (Note 5), under-voltage, momentary power failure (50ms or more), over-temperature, over-current, over-load, over-load protection, arm overload at starting, overcurrent on the load side at starting, overcurrent and overload at dynamic braking, over-heat, emergency stop
Alarms	Selectable by binary standard mode/forward torque VF motor adjustment of overload protection and stall prevention level.
Causes of failures	Reset by 1 to 3 contact closure (to contact closure) by the operation panel. Or power source OFF/ON. This function is also used to save and clear trip records.
LED	Start current during operation, stop current limit, overcurrent on power source side, DC circuit undervoltage, setting error, a relay, upper limit, lower limit, stop current limit, inverter over-heat, short circuit on the load side, fault on the load side, velocity feedback error, motor over-heat, motor over-current, over-current on the load side at starting, EEPROM error, RAM error, ROM error, transmission error, dynamic braking resistor overcurrent/overload, (emergency stop), (under-voltage), (low current), (over torque), (motor over-heat), (output phase fail) (The items in the parentheses are selectable).
4-digit and 7-digit LED	Operation frequency, operation frequency command, forward/reverse run, output current, DC voltage, output voltage, compensated frequency, terminal board (input/output information), CPU version, control EEPROM version, past trip history, cumulative operation time, speed feedback, torque, torque command, torque current, output current, PID feedback value, motor overload factor, inverter overload factor, PWR overload factor, PWRB overload factor, input power, output power, peak output current, peak DC voltage, Motor counter parallel PG, position pulse, RH input, VIII input, RX input, R32 input, R3 input, R2 input, R1 input, R0 input, AM output, meter adjustment fix output, flash memory version, main circuit EEPROM version, types of connection option, previous default setting, previous automatic control (AU2)
Free unit display	Display of optional units other than output frequency (motor speed, line speed, etc), current ampere(s), switch, voltage volt(s), switch
Automatic edit function	Searches automatically parameters that are different from the standard default setting parameters. Easy to find changed parameters.
User default setting	User parameter settings can be saved as default settings. Allow to reset the parameters to the user-defined parameter settings.
Charge display	Displays main circuit capacitor charging.
Input/output terminal input function	Possible to select positive logic or negative logic with programmable input/output terminal function menu. Note 1: Note 2: (Default setting: positive logic)
LED	Possible to switch between minus common (CS) and plus common (PS) for control terminal. (Default setting: minus common (CS))
Failure detection signal	IC contact output (250Vdc/2A/200mA), 250Vdc/1A/400mA/0.5A, 300Vdc/1A
Non-synchronous output (Note 2)	Open collector output (24Vdc, max. 50mA, output impedance: 3k Ω)
Power limit frequency signal output (Note 2)	Open collector output (24Vdc, max. 50mA, output impedance: 3k Ω)
Charge for frequency measurement for inverter (Note 3)	Analog output, 1mA/4dc full-scale DC ammeter or 7.7Vdc, 1mA voltmeter
Push train frequency output	Open collector output (24Vdc, max. 50mA)
Communication function	RS-485 standard 2-channel equipped (connector: modular BPC-Link, DtwCoLink and PROFIBUS-DP are optional).
Operating environment	Indoor use. Altitude: 3000m or less (current reduction necessary if 1000m or more, max. 60°C). Note 4:
Ambient temperature	-10 to +60°C (Remove the upper current limit 40°C or more, max. 60°C). Note 4:
Storage temperature	-25 to +65°C
Relative humidity	20 to 95%, (free from condensation)
Vibration	5.9m/s ² (0.6G) or less (0 to 95Hz) (Compliant with JIS C0049)

Note 1: 16 contact input terminals (of which 8 are optional) are programmable contact input terminals, and they make it possible to arbitrarily select from 136 types of signals.

Note 2: Programmable ON/OFF output terminals make it possible to arbitrarily select from 150 types of signals.

Note 3: Programmable analog output terminals make it possible to arbitrarily select from 55 types of signals.

Note 4: When using inverters where the ambient temperature will rise above 50°C, remove the upper cover and operate each inverter at a current lower than the rated one.

Note 5: This function protects inverters from overcurrent due to output circuit ground fault.

External dimensions

■ 200 V class - 0.4 to 45 kW, 400 V class - 0.75 to 75 kW model

Figure A

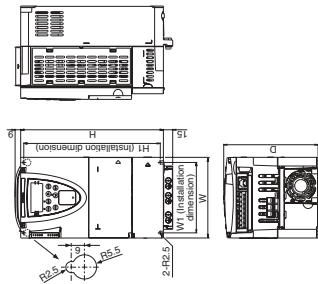


Figure B

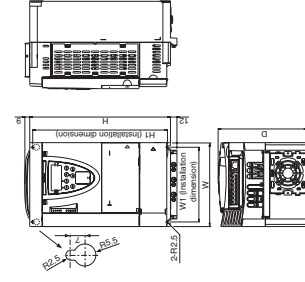


Figure C

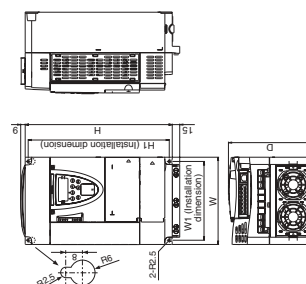


Figure D

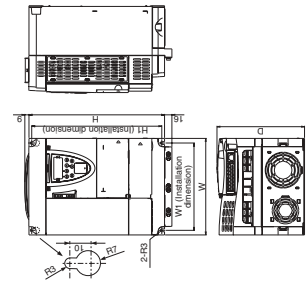


Figure E

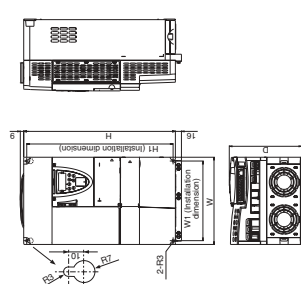


Figure F

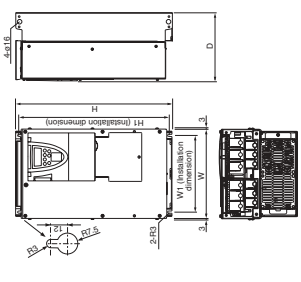


Figure G

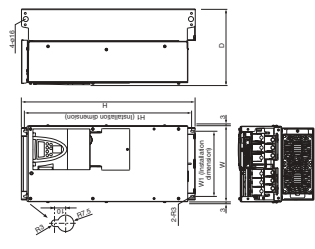


Figure H


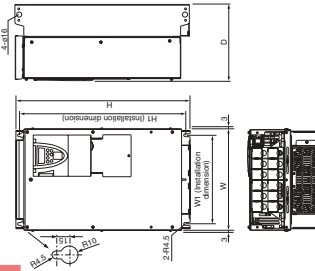












Figure I

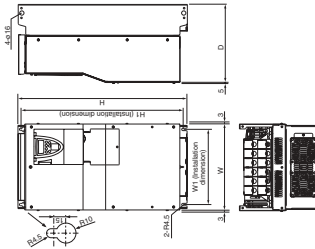

Input Voltage Class	Applicable Motor (kW)	Inverter Type	Dimensions (mm)					External Dimension Drawing	Approx. Weight (kg)
			W	H	D	WT	HT		
200V	0.4	VFAS1-2004PL	130	230	152	114	220	A	3
	0.75	VFAS1-2007PL	130	230	152	114	220	A	3
	1.5	VFAS1-2015PL	155	260	164	138	249	B	4
	2.2	VFAS1-2022PL	175	295	164	158	283	C	5.5
	3.7	VFAS1-2037PL	210	295	191	190	283	D	7
	5.5	VFAS1-2055PL	230	400	191	210	386	E	9
	7.5	VFAS1-2075PL	240	420	212	206	403	F	21
	11	VFAS1-2110PM	320	550	242	280	525	H	39
	15	VFAS1-2150PM	320	550	242	280	525	H	39
	18.5	VFAS1-2185PM	320	550	242	280	525	H	39
	22	VFAS1-2220PM	320	550	242	280	525	H	39
	30	VFAS1-2300PM	320	550	242	280	525	H	39
400V	0.75	VFAS1-4007PL	130	230	152	114	220	A	3
	1.5	VFAS1-4015PL	130	230	152	114	220	A	3
	2.2	VFAS1-4022PL	155	260	164	138	249	B	4
	3.7	VFAS1-4037PL	175	295	164	158	283	C	5.5
	5.5	VFAS1-4055PL	210	295	191	190	283	D	7
	7.5	VFAS1-4075PL	230	400	191	210	386	E	9
	11	VFAS1-4110PL	230	400	191	210	386	E	13
	15	VFAS1-4150PL	240	420	212	206	403	F	15
	18.5	VFAS1-4185PL	240	420	212	206	403	F	21
	22	VFAS1-4220PL	240	420	212	206	403	F	21
	30	VFAS1-4300PL	240	550	242	206	529	G	28
	37	VFAS1-4370PL	320	630	290	280	605	I	47.5
45	VFAS1-4450PL	320	630	290	280	605	I	47.5	
55	VFAS1-4550PL	320	630	290	280	605	I	47.5	
75	VFAS1-4750PL	320	630	290	280	605	I	47.5	

External dimensions

■ 200 V class - 55 to 75 kW, 400 V class - 90 to 500 kW model

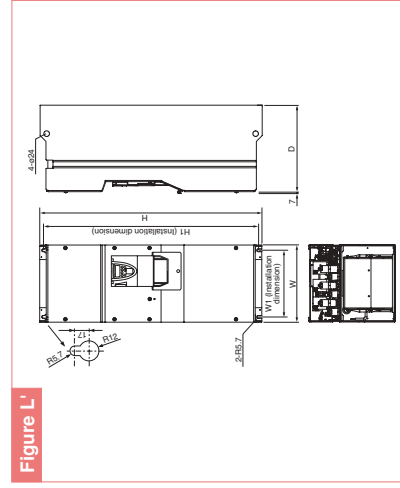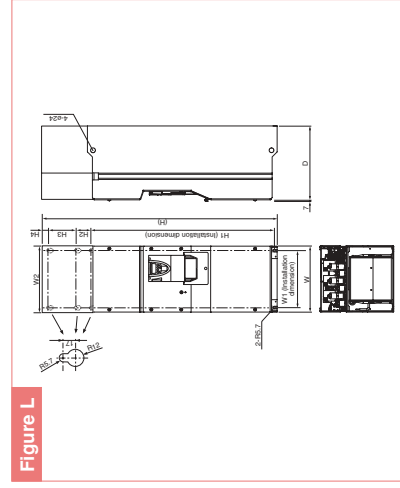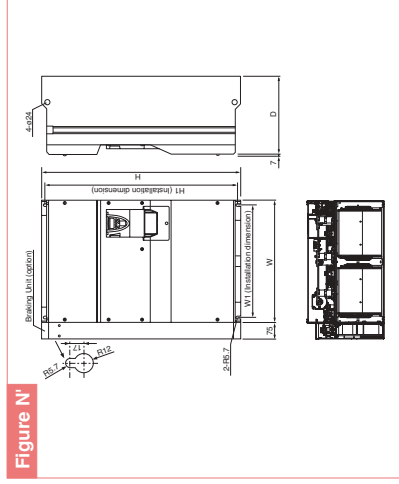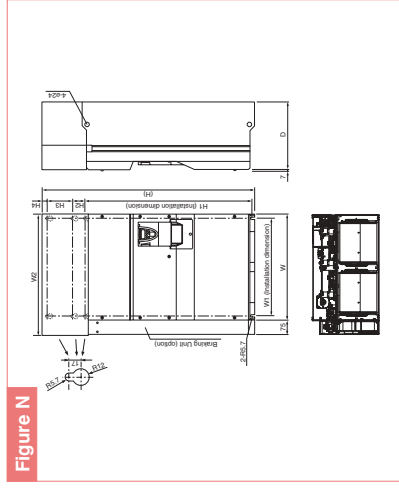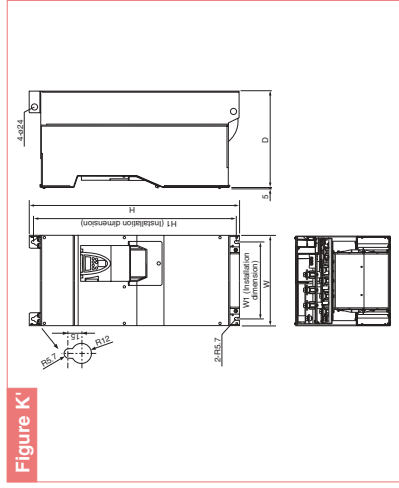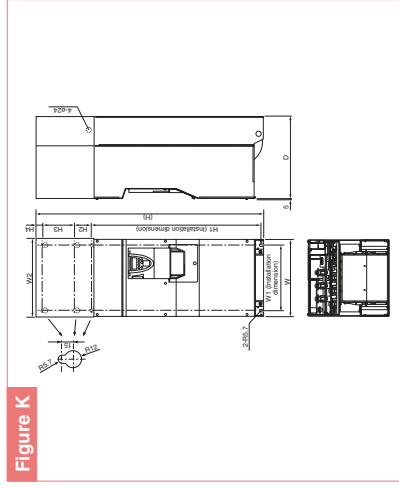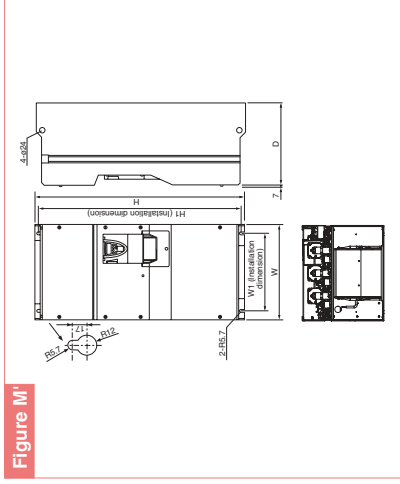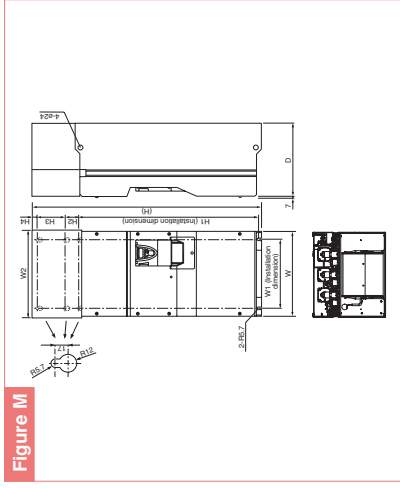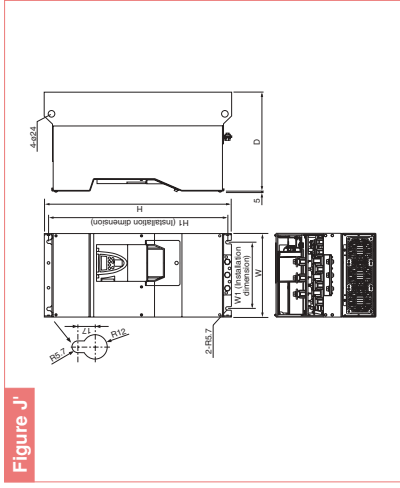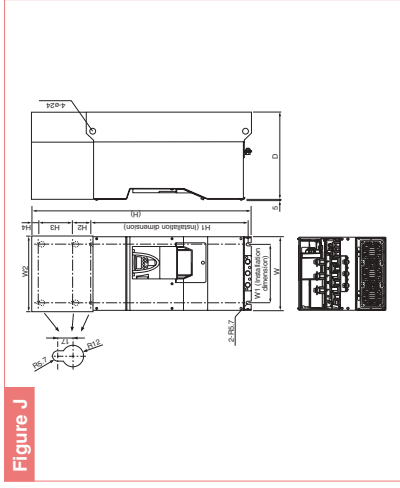


Input Voltage Class	Applicable Motor (kW)	Inverter Type	Dimensions (mm)										Drawing	Approx. Weight (kg)
			W	H	D	W1	H1	W2	H2	H3	H4			
200V	55	VFAS1-2550P	310	920 (680)	370	250	650	320	75	150	30	J	84 (59)	
	75	VFAS1-2750P	350	1022 (782)	370	288	758	360	72	150	30	K	106 (72)	
	90	VFAS1-4900PC	310	920 (680)	370	250	650	320	75	150	30	J	84 (60)	
400V	110	VFAS1-4110KPC	350	1022 (782)	370	288	758	360	72	150	30	K	106 (74)	
	132	VFAS1-4132KPC	330	1190 (950)	370	285	920	340	75	150	30	L	116 (80)	
	160	VFAS1-4160KPC	430	1190 (950)	370	350	920	440	75	150	30	M	163 (110)	
	200	VFAS1-4200KPC	585	1190 (950)	370	540	920	595	75	150	30	N	207 (140)	
	220	VFAS1-4220KPC										M	163 (110)	
	280	VFAS1-4280KPC										N	207 (140)	
	355	VFAS1-4355KPC									N	207 (140)		
	400	VFAS1-4400KPC									N	207 (140)		
	500	VFAS1-4500KPC									N	207 (140)		

Coming soon

Note) Values in () are not DC reactor attached.

Standard connection diagrams

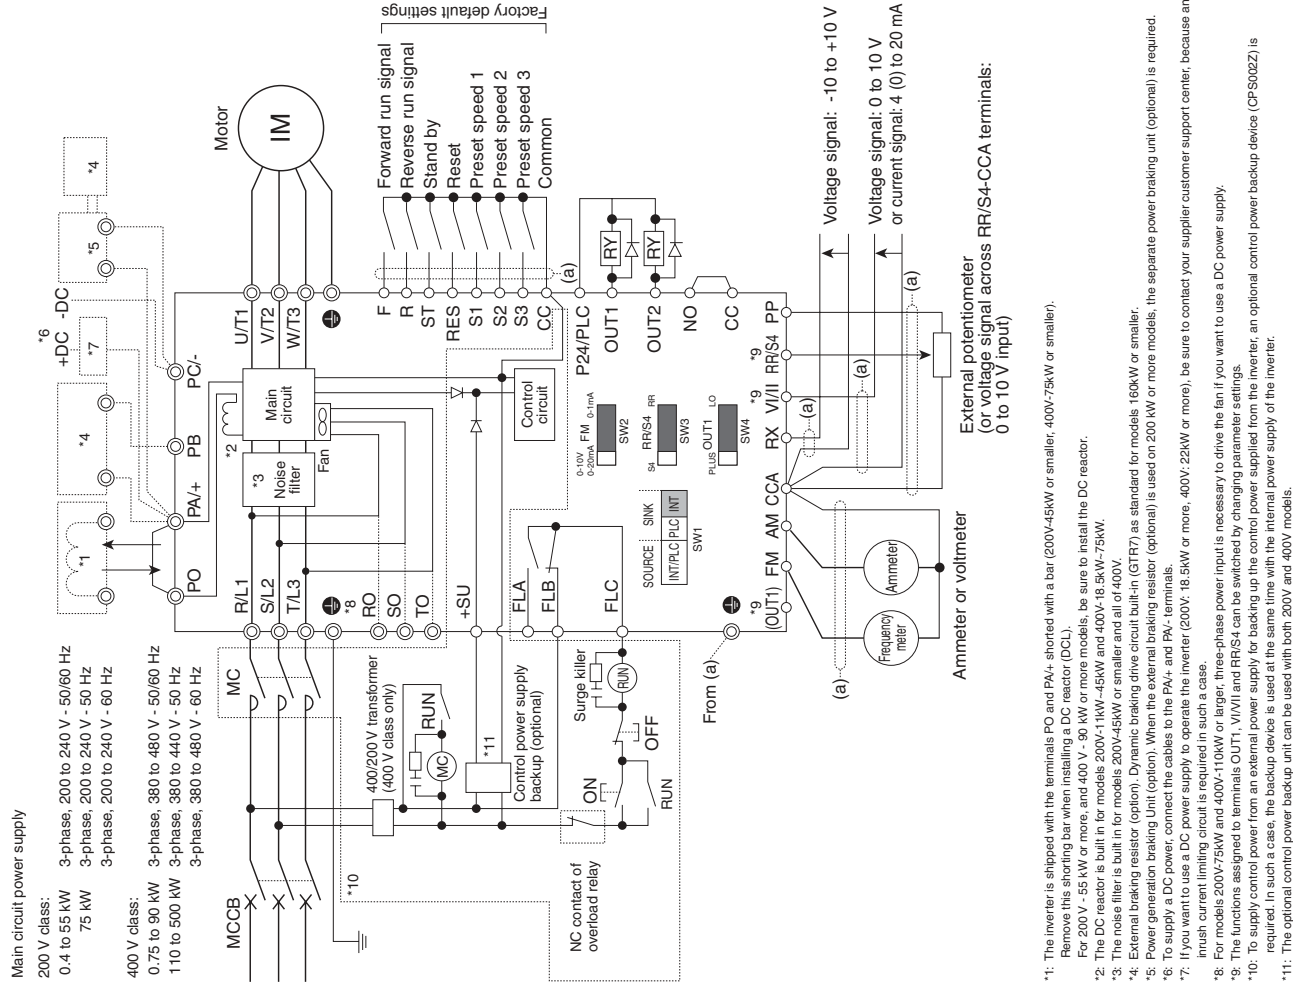

Terminal functions

Main circuit terminal

Terminal Symbol	Terminal Function
Grounding terminal for inverter casing	
200V class: R/L1, S/L2, T/L3	400V class: 0.75-75kW Three-phase 380-480V/60Hz 90-500kW Three-phase 380-440V/50Hz Three-phase 380-480V/60Hz
U/T1, V/T2, W/T3	Connect to a (3-phase induction) motor.
PA+, PB	Connect a braking resistor. (For the optional dynamic braking unit, connect it between PA+ and PC+.) Change the parameters P ₅ , P _{5r} , and P _{5c} if necessary. 200kW models and smaller are not equipped with terminal PB. If you are using such a model and you wish to use a braking resistor, you will need to purchase a braking unit separately.
PC+	This is a negative potential terminal in the internal DC main circuit. DC common power can be input across the PA+ terminals (positive potential).
PO, PA+	Terminals for connecting a DC reactor (DCL: optional external device). Shorted by a short bar when shipped from the factory (200V: 45kW or smaller, 400V: 75kW or smaller). Before installing DCL, remove the short bar.
RO, SO, TO	200V class: 75kW 400V class: 110kW-500kW Inverter's cooling power input terminals. When using a DC power supply, connect three-phase power cables.

Control circuit terminal

The terminal function settings can be changed according to the application.

Terminal Symbol	Input/output	Function	Electrical Specifications
F	Input	Shorting across F-CC causes forward rotation; open causes deceleration stop. (Across ST-CC is short state.)	24Vdc-200mA
R	Input	Shorting across R-CC causes reverse rotation; open causes deceleration stop. (Across ST-CC is short state.)	—
ST	Input	The motor is on standby if ST and CC are connected. It coasts to a stop if this connection is broken. This terminal can be used for interlocking.	—
RES	Input	Shorting and then opening RES-CC cancels the status held by an inverter protective function. When the inverter is operating normally, shorting and then opening RES-CC produces no effect.	—
S1	Input	Shorting across S1-CC causes preset speed operation.	—
S2	Input	Shorting across S2-CC causes preset speed operation.	—
S3	Input	Shorting across S3-CC causes preset speed operation.	—
RRS4	Input	SW3: When SW4 is in the S4 position, S4 and CC are shorted and preset speed operation is selected.	—
P24/PLC	Output	24Vdc power output (when SW1 is in any position other than PLC) 24V internal output terminal	24Vdc-200mA
CC+	Input	If SW1 is turned to the PLC position, this terminal can be used as a common terminal when an external power supply is used.	—
Common to input/output	Input/output	Digital signal equipotential (OV) terminal for the control circuit and equipotential (OV) terminal for an optional control power supply backup.	—
PP	Output	Analog input setting power output	10Vdc (Permissible load current: 10mAdc)
RRS4	Input	SW3: Multifunction programmable analog input terminal when SW4 is in the RR position. Standard default setting: 0-10Vdc input and 0-60Hz frequency Multifunction programmable analog input (Standard default setting: 0-10Vdc input and 0-60Hz frequency). This terminal can also be used as a 4-20mAdc (0-20mAdc) input terminal, if the parameter F.68 is set to 1.	10Vdc (Internal impedance: 30 kΩ) 10Vdc (Internal impedance: 30 kΩ) 4-20mA (Internal impedance: 242Ω)
VI/II	Input	Multifunction programmable analog input. Standard default setting: 0-10Vdc input and 0-160Hz frequency.	10Vdc (Internal impedance: 22 kΩ)
RX	Input	Multifunction programmable analog input. Standard default setting: output current	1mA full-scale DC ammeter or 7.5Vdc-1mA full-scale DC voltmeter
FM	Output	Multifunction programmable analog output. Standard default setting: output frequency This terminal can also be used as a 0-20mA (4-20mA) terminal, if the parameter F.68 is set to 1 and the SW2 switch is set to OFF.	0-20mA (4-20mA) Full-scale DC ammeter
AM	Output	Multifunction programmable analog output. Standard default setting: output current Use this terminal to connect a 1mAdc full-scale ammeter or 7.5Vdc-1mA full-scale voltmeter.	1mA full-scale DC ammeter or 7.5Vdc-1mA full-scale DC voltmeter
OUT1	Output	Multifunction programmable open collector output. The default setting is to output a signal when output low speed threshold has been reached. Depending on the SW4 setting, pulses are output with frequencies of 1.00kHz to 43.20kHz. Standard default setting: 3.84kHz.	Open collector output 24Vdc-50mA
OUT2	Output	Multifunction programmable open collector output. By default, it is set to output a signal indicating the completion of acceleration or deceleration.	—
NO	Common to input/output	Digital output signal equipotential (OV) terminal for the control circuit. It is insulated from the CC terminal.	*Sink logic/source logic switchable
CCA*	Input	Analog input/output signal equipotential (OV) terminal for the control circuit.	—
+SU	Input	DC power input terminal for operating the control circuit. Connect a control power backup device (optional) between +SU and CC.	Use a power supply with a current rating of 1.1A or more. 250Vdc-2A at resistance load 250Vdc-1A at resist=50.4
FLA	Output	Relay contact output. Contact rating	—
FLB	Output	Used to detect the activation of the inverter's protective function. Contact across FLA-FLC is closed and FLB-FLC is opened during protection function operation.	—
FLC	Output		—

*1: Although the CC terminal and the CCA terminal are not insulated, they should be used separately, one for the logic circuit and the other for the analog circuit.

For inverter users

When studying how to use our inverters

Notes

Leakage current

This inverter uses high-speed switching devices for PWM control. When a relatively long cable is used for power supply to an inverter, current may leak from the cable to the motor to the ground because of its capacitance, adversely affecting peripheral equipment. The intensity of such a leakage current depends on the PWM carrier frequency, the lengths of the input and output cables, etc., or the inverter. To prevent current leakage, it is recommended to take the following measures.

(Effects of leakage current)


Leakage current which increases when an inverter is used may pass through the following routes.

- Route (1) ... Leakage due to the capacitance between the ground and the noise filter
- Route (2) ... Leakage due to the capacitance between the ground and the inverter
- Route (3) ... Leakage due to the capacitance between ground and the cable connecting the inverter and the motor
- Route (4) ... Leakage due to the capacitance of the cable connecting the motor and an inverter in another power distribution line

- Route (5) ... Leakage through the grounding line common to motors
- Route (6) ... Leakage to another line because of the capacitance of the ground

Leakage current which passes through the above routes may cause the following trouble.

- Malfunction of a leakage circuit breaker in the same or another power distribution line
- Distribution of a ground-relay installed in the same or another power distribution line
- Noise produced at the output of an electronic device in another power distribution line
- Activation of an external thermal relay installed between the inverter and the motor, at a current below the rate current

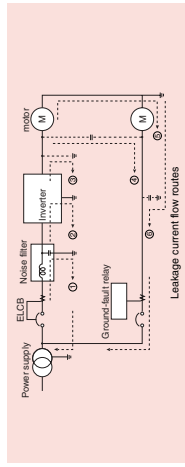

(Measures against effects of leakage current)

The measures against the effects of leakage current are as follows:

- 1) Measures to prevent the malfunction of leakage circuit breakers
 - (1) Decrease the PWM carrier frequency of the inverter. ^{Note}
 - (2) Use radio-frequency interference-proof ELCBs (manufactured by Toshiba Schneider Inverter Corporation) as ground-fault interrupters in not only the system into which the inverter is incorporated but also other systems. When ELCBs are used, the PWM carrier frequency needs to be increased to operate the inverter.
- (3) When connecting multiple inverters to a single ELCB, use an ELCB with a high current sensitivity or reduce the number of inverters connected to the ELCB.
- 2) Measures against malfunction of ground-fault relay:
 - (1) Decrease the PWM carrier frequency of the inverter. ^{Note}
 - (2) Install ground-fault relays with a high-frequency protective function (e.g., Toshiba CORRT2 type of relays) in both the same and other lines. When ELCBs are used, the PWM carrier frequency needs to be increased to operate the inverter.
- 3) Measures against noise produced by other electric and electronic systems and electronic systems:
 - (1) Separate the grounding line of the inverter from that of the affected electric and electronic systems.
 - (2) Decrease the PWM carrier frequency of the inverter. ^{Note}
 - (3) Decrease the PWM carrier frequency of the inverter. ^{Note}
 - (4) Measure against malfunction of external thermal relays:
 - (1) Remove the external thermal relay and use the electronic thermal function of the inverter instead of it. (Unapplicable to cases where a single inverter is used to drive more than one motor. Refer to the instruction manual for measures to be taken when thermal relays cannot be removed.)
 - (2) Decrease the PWM carrier frequency of the inverter. ^{Note}
 - (3) Decrease the PWM carrier frequency of the inverter. ^{Note}
 - (5) Measure by means of wiring and grounding
 - (1) Use a grounding wire as large as possible.
 - (2) Separate the inverter's grounding wire from that of other systems or install the grounding wire of each system separately to the grounding point.
 - (3) Ground (shield) the main circuit wires with metallic conduits.

- (4) Use the shortest possible cables to connect the inverter to the motor.
- (5) If the inverter has a high-attenuation EMI filter, turn off the grounding capacitor detachment switch to reduce the leakage current. Note that doing so leads to a reduction in the noise attenuating effect.

^{Note} In the case of this inverter, the PWM carrier frequency can be decreased to 1.0kHz.

^{Warning} That it should not be set to less than 2.0kHz during vector control. Decreasing the carrier frequency results in an increase in electromagnetic noise from the motor.

Ground fault

Before beginning operation, thoroughly check the wiring between the motor and the inverter for incorrect wiring or short circuits. Do not ground the neutral point of any star-connected motor.

Radio interference

(Noise produced by inverters)

Since this inverter performs PWM control, it produces noise and sometimes affects nearby instrumental devices, electrical and electronic systems, etc. The effects of noise greatly vary with the noise resistance of each individual device, its wiring condition, the distance between it and the inverter, etc.


(Measures against noises)

According to the route through which noise is transmitted, the noises produced by an inverter are classified into transmission noise, induction noise and radiation noise.

(Examples of protective measures)

- Separate the power line from other lines, such as weak-current lines and signal lines, and install them apart from each other.
- Install a noise filter in other devices and systems, as well.
- Shield cables and wires with grounded metallic conduits, and cover electronic systems with grounded metallic cases.
- Separate the power distribution line of the inverter from that of other devices and systems.
- Install the input and output cables of the inverter apart from each other.
- Use shielded twisted pair wires for wiring of the weak-current and signal circuits, and always ground one of each pair of wires.
- Ground the inverter with grounding wires as large and short as possible, separately from other devices and systems.
- Ground the inverter from other devices and systems.

On 200V 0.4 to 7.5kW and 400V 0.75 to 75kW models, noise can be greatly reduced as they have a built-in EMI noise filter on their input side.

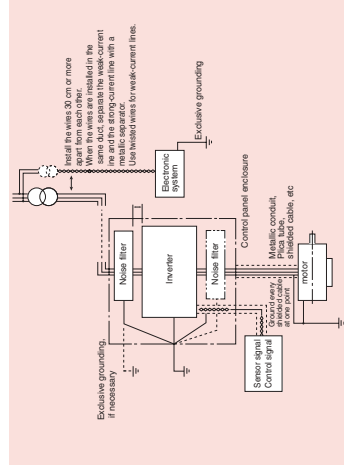

Power factor improvement capacitors

Do not install a power factor improvement capacitor on the input or output side of the inverter.

Installing a power factor improvement capacitor on the input or output side causes current containing harmonic components to flow into the capacitor, adversely affecting the capacitor itself or causing the inverter to trip. To improve the power factor, install an input AC reactor or a DC reactor (optional) on the primary side of the inverter.

Installation of input AC reactors

These devices are used to improve the input power factor and suppress high harmonic currents and surges. Install an input AC reactor when using this inverter under the following conditions:

- (1) When the power source capacity is 500kVA or more, and when it is 10 times or more greater than the inverter capacity.
- (2) When the inverter is equipped with the same power distribution system as a thyristor-committed control equipment.
- (3) When the inverter is connected to the same power distribution system as that of distorted wave-producing systems, such as arc furnaces and large-capacity inverters.

When wiring the inverter

Wiring precautions

Installing a molded-case circuit breaker (MCCB)

- (1) Install a molded-case circuit breaker (MCCB) on the inverter's power supply input to protect the wiring.
- (2) Avoid turning the molded-case circuit breaker on and off frequently to turn on/off the motor.
- (3) To turn on/off the motor frequently, close/break the control terminals F (or R)-CC.

Installing a magnetic contactor (MC) (primary side)

- (1) To prevent an automatic restart after the power interruption or overload relay has tripped, or actuation of the protective circuit, install an electro-magnetic contact in the power supply.
- (2) The inverter is provided with a failure detection relay (FL), so that, if its contacts are connected to the operation circuit of the magnetic contactor on the primary side, the magnetic contactor will be opened when the protective circuit of the inverter is activated.
- (3) The inverter can be used without a magnetic contactor. In this case, use an MCCB (equipped with a voltage tripping device) for opening the primary circuit when the inverter protective circuit is activated.
- (4) Avoid turning the magnetic contactor on and off frequently to turn on/off the motor.
- (5) To turn on/off the motor frequently, close/break the control terminals F (or R)-CC.

Installing a magnetic contactor (MC) (secondary side)

- (1) As a rule, if a magnetic contactor is installed between the inverter and the motor, do not turn ON/OFF while running. (If the secondary-side contactor is turned ON/OFF while running, a large current may flow in the inverter, causing inverter damage and failure.)
- (2) A magnetic contactor may be installed to change the motor or change to the commercial power source when the inverter is stopped. Always use an interlock with the magnetic contactor in this situation so that the commercial power supply is not applied to the inverter's output terminals.

External signal

- (1) Use a relay rated for low currents. Mount a surge suppressor on the excitation coil of the relay.
- (2) When wiring the control circuit, use shielded wires or twisted pair cables.
- (3) Because all of the control terminals except FLA, FLB and FLC are connected to electronic circuits, insulate these terminals to prevent them from coming into contact with the main circuit.

Installing an overload relay

The VF-S11 inverter has an electronic-thermal overload protective function. However, in the following cases, the thermal relay operation level must be adjusted or an overload relay matching the motor's characteristics must be installed between the inverter and the motor.

- (a) When using a motor having a rated current value different from that of the equivalent.
 - (b) When driving several motors simultaneously.
- (2) When using the inverter to control the operation of a constant-torque motor (VF motor), change the protective characteristic of the electronic thermal relay according to the setting of the VF motor.
- (3) In order to adequately protect a motor used for low-speed operation, we recommend the use of a motor equipped with an embedded thermal relay.

When changing the motor speed

Application to standard motors

Vibration

When a motor is operated with an industrial inverter, it experiences more vibrations than when it is operated by the commercial power supply. The vibration can be reduced to a negligible level by securing the motor and machine to the base firmly. If the base is weak, however, the vibration may increase at a light load due to resonance with the mechanical system.

Reduction gear, belt, chain

Note that the lubrication capability of a reducer or a converter used as the interface of the motor and the load machine may be affected at low speeds.

When operating at a frequencies exceeding 60 Hz or higher, power transmission mechanisms such as reduction gear, belts and chains, may cause problems such as production of noise, a reduction in strength, or shortening of service life.


Frequency

Before setting the maximum frequency to 60 Hz or higher, confirm that this operating range is acceptable for the motor.

Application to special motors

Braking motor

When using a braking motor, if the braking circuit is directly connected to the inverter's output terminals, the brake cannot be released because of the lowered starting voltage. Therefore, when using a braking motor, connect the braking circuit to the inverter's power supply side, as shown on the below. Usually, braking motors produce larger noise in low speed ranges.

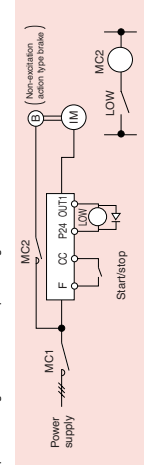

Gear motor

When using an industrial inverter to drive a gear motor, inquire of the motor manufacturer about its continuous operation range, since low-speed operation of a gear motor may cause insufficient lubrication.

Toshiba Gold Motor (High-efficiency power-saving motor)

Inverter-driven operation of Toshiba Gold Motors is the best solution for saving energy. This is because these motors have improved efficiency, power factor, and noise/vibration reduction characteristics when compared to standard motors.

Pole-changing motor

Pole-changing motors can be driven by this inverter. Before changing poles, however, be sure to let the motor come to a complete stop.

High-pole-count motors

Note that high-pole count motors (8 or more poles), which may be used for fans, etc., have higher rated current than 4-pole motors. The current ratings of multiple motors are relatively high. So, when selecting an inverter, you must pay special attention to its current rating so that the current rating of the motor is below that of the inverter.

Single-phase motor

Because single-phase motors are equipped with a centrifugal switch and capacitors for starting, they cannot be driven by an inverter. If only a single-phase, power system is available a 3-phase motor can be driven by using a single-phase input inverter to convert it into a 3-phase 200V output. (A special inverter and a 3-phase motor are required.)

To users of our inverters : Our inverters are designed to control the speeds of three-phase induction motors for general industry.

 **Precautions**

- * Read the instruction manual before installing or operating the inverter unit and store it in a safe place for reference.
- * When using our inverters for equipment such as nuclear power control, aviation and space flight control, traffic, and safety, and there is a risk that any failure or malfunction of the inverter could directly endanger human life or cause injury, please contact our headquarters, branch, or office printed on the front and back covers of this catalogue. Special precautions must be taken and such applications must be studied carefully.
- * When using our inverters for critical equipment, even though the inverters are manufactured under strict quality control always fit your equipment with safety devices to prevent serious accident or loss should the inverter fail (such as issuing an inverter failure signal).
- * Do not use our inverters for any load other than three-phase induction motors.
- * None of Toshiba, its subsidiaries, affiliates or agents, shall be liable for any physical damages, including, without limitation, malfunction, anomaly, breakdown or any other problem that may occur to any apparatus in which the Toshiba inverter is incorporated or to any equipment that is used in combination with the Toshiba inverter. Nor shall Toshiba, its subsidiaries, affiliates or agents be liable for any compensatory damages resulting from such utilization, including compensation for special, indirect, incidental, consequential, punitive or exemplary damages, or for loss of profit, income or data, even if the user has been advised or apprised of the likelihood of the occurrence of such loss or damages.

**For further information, please contact your nearest Toshiba Representative or International Operations-Producer Goods.
The information in this brochure is subject to change without notice.**

TOSHIBA

TOSHIBA CORPORATION
INDUSTRIAL AND POWER SYSTEMS & SERVICES COMPANY

Overseas Sales & Marketing Department
Electrical Apparatus & Measurement Division
1-1, Shibaura 1-chome, Minato-ku,
Tokyo 105-8001, Japan
Tel.: +81(0)3-3457-4911 Fax.: +81(0)3-5444-9268

05-07 (AB)8696

